

TO OPEN

Open the hook A1 (Fig. 1) on the side of the stroller, and pull the pushchair upwards by the handlebar, until it clicks into place. (Fig. 1)

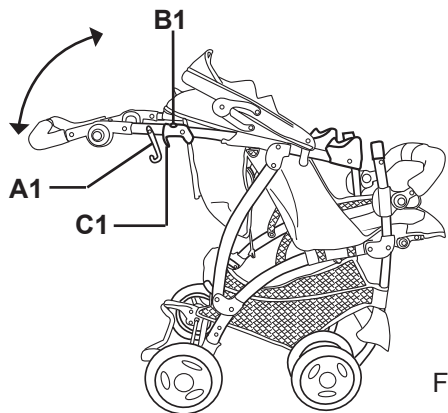


Fig. 1

TO FOLD

The backrest must be in the flat position. Press the button B1 and pull the levers C1 upwards on both sides. Fold the stroller and close the hook A1. (Fig. 1)

TO FIT THE REAR WHEELS

AXLE: Push the axle bar onto the rear frame tubes, so that the spring-buttons A2 fit into the openings B2 on the rear axle mountings and engage. (Fig. 2)

WHEELS: Press in the buttons C2 and push the wheels onto the axle bar until you distinctly hear them engage. (Fig. 2.1, Fig. 2.2)


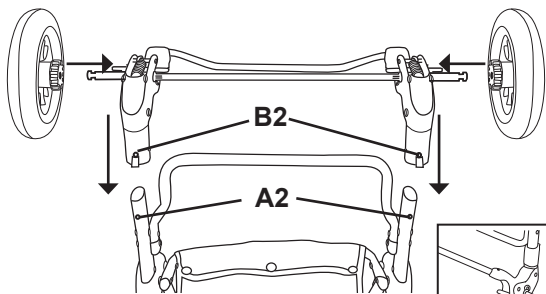


Fig. 2.1

Fig. 2.2

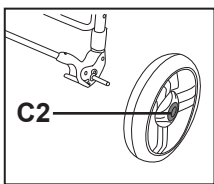

C2

TO FIT THE FRONT WHEELS

Push the double wheel blocks A3 onto the upper front wheel housings B3 until they engage. (Fig. 3)

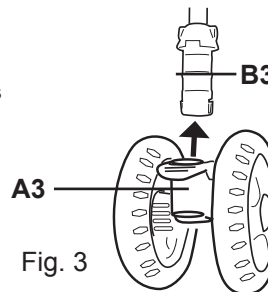


Fig. 3

TO FIX AND TO RELEASE THE BRAKES

TO FIX: Press down the one-touch brake levers A4 with your foot until you distinctly feel the brakes engage. (Fig. 4)

TO RELEASE: Push the brake levers A4 upwards. (Fig. 4)

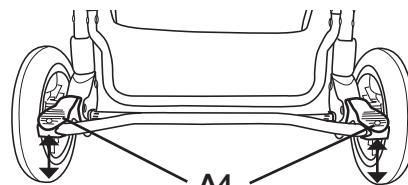


Fig. 4

!	SAFETY	!
Never leave the MARCO Tonio without engaging the brakes.		

TO FIX AND TO SWIVEL THE FRONT WHEELS

TO FIX: Turn the front double wheels so that the fixing lever A5 faces the front. Push the lever A5 on the double wheel block upwards until it engages. (Fig. 5)

TO SWIVEL: Press the lever A5 on the double wheel block downwards. (Fig. 5)

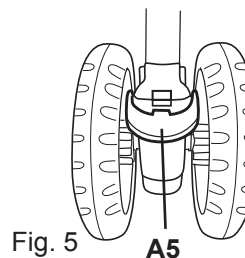


Fig. 5

!	SAFETY	!
Before putting your child in the MARCO Tonio, engage the brakes to make sure it doesn't roll away.		

SAFETY BAR

TO FIT: Press the safety bar fittings A6 onto the frame tubes as shown in Fig. 6.

TO ADJUST: Press the buttons B6 on both sides of the safety bar and adjust it into the desired position. (Fig. 6)

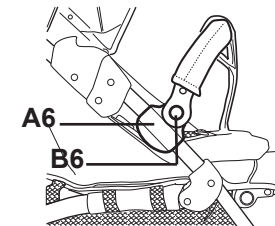


Fig. 6

TO ADJUST THE BACKREST

Pull up the backrest release A7 and adjust the backrest into the required position. (Fig. 7)

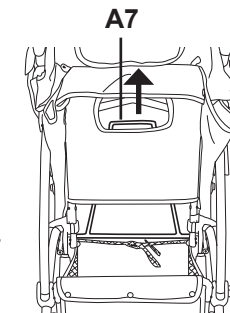


Fig. 7

SAFETY HARNESS

The MARCO Tonio has a five-point shoulder harness. Always use the crotch strap A8 in combination with the waist belts B8. Adjust belt to ensure a snug fit. (Fig. 8)

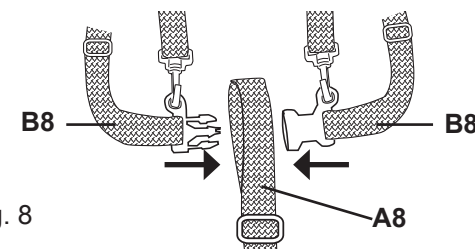


Fig. 8

!	SAFETY	!
Always ensure that your child is safely belted in.		

TO ADJUST THE LEG REST

To adjust the legrest, press the buttons A9 at each side of the legrest joint and adjust to the required position. (Fig. 9)

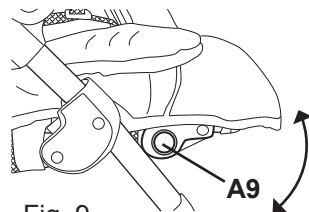


Fig. 9

TO FIT THE CANOPY

Push the canopy fitting hooks A10 on both sides onto the frame tubes as shown in Fig. 10. Secure the canopy on both sides with the velcro fasteners B10. (Fig 10)

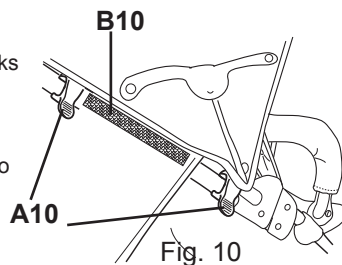


Fig. 10

MAINTENANCE

The textiles are easily removable and handwashable at 30° C. The frame and the wheels should be wiped with a damp cloth and mild soap. Don't use strong detergents, they could damage plastic. Regularly lubricate the moving parts with silicon oil or silicon spray.

NOTE

This vehicle is intended for children up to a maximum weight of 15kg. The net basket should not be loaded with more than 3 kg. The vehicle is designed to be used by one child only. Spare parts or accessories which are not approved by the manufacturer or dealer may not be used. Periodically check all parts for wear or damage. Do not use stroller if any component is broken or damaged. Please do not make any changes to the stroller that could affect the safety.

WARNINGS

WARNING: It may be dangerous to leave your child unattended.
WARNING: Ensure that all the locking devices are engaged before use.
WARNING: Always use the crotch strap in combination with the waist belts.
WARNING: Any load attached to the handle affects the stability of the pram/pushchair.

ACCESSORY:

This push chair is equipped with a car seat adapter matching the car seat MARCO Maxxi (Group 0+)
Attention: Car seats of other brands do not fit on the adapter!

TO ATTACH THE CAR SEAT MARCO MAXXI

Press button A11 below the car seat adapter B11 and fold the car seat adapters forward on both sides.

Fig. 11.1, Fig 11.2

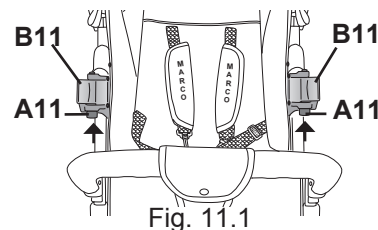


Fig. 11.1

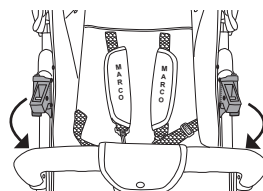


Fig. 11.2

Adjust the bumper bar C11 so that it matches the receptors D11 of the car seat.

In case the bumper bar cannot easily adjusted, remove the bumper bar turn it round and attach it again.

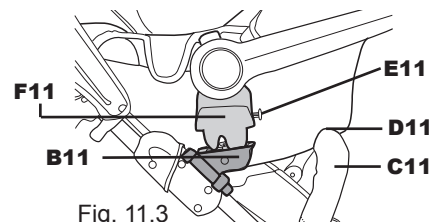


Fig. 11.3

Press buttons E11 and push the locking devices F11 into the adapters B11 until they engage.

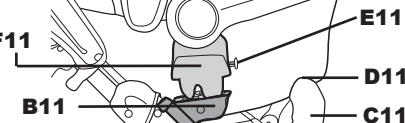


Fig. 11.3

SAFETY

Before putting your child into the MARCO Maxxi car seat, make sure that the car seat is completely attached to the push chair and that all locks are engaged.

USER'S INSTRUCTIONS



IMPORTANT: Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

MARKETING AND DISTRIBUTION
MARCO HANDELSGESELLSCHAFT M.B.H.
A-5440 GOLLING, AUSTRIA
www.marco4bb.com

© MARCO HANDELSGESELLSCHAFT M.B.H., 2006
A-5440-Golling, Austria