

**TO OPEN**

Open straps A on both sides and pull up the stroller by the handgrips.  
Push down lever B at the rear of the stroller with one foot, until you hear the cross-strut engage. (Fig.1.1, 1.2)

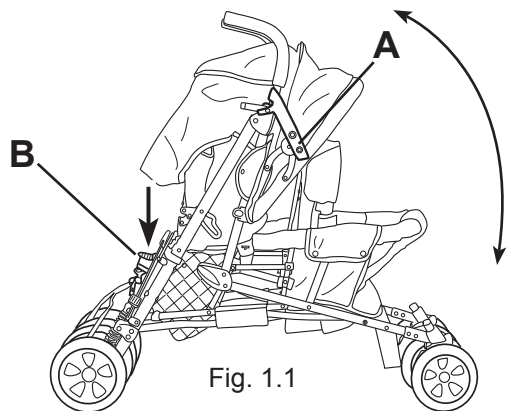


Fig. 1.1

**TO CLOSE**

1.) Release the brakes C. (Fig.1.2)  
2.) Press the bottom lock B upwards with your foot. (Attention: Push upwards only the lever B, NOT the connecting bars of the brakes.)  
3.) Release the secondary lock by pushing lever D down with your foot.  
Fold the buggy forwards and fasten together with the straps A. (Fig. 1.1, Fig.1.2)

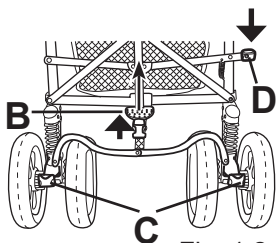


Fig. 1.2

**TO FIT THE FRONT WHEELS**

Push the front double wheel blocks E onto the upper front wheel housings F until they engage. (Fig. 2.1)

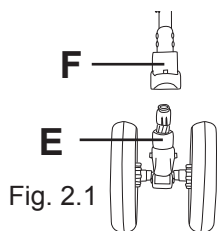


Fig. 2.1

**TO FIT THE REAR WHEELS**

Push the set of rear wheel blocks G (they are connected through the brake) onto the rear frame tubes until they engage and close buckle H (Fig. 2.2, Fig 2.3)

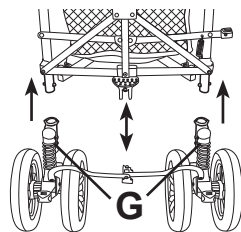


Fig. 2.2

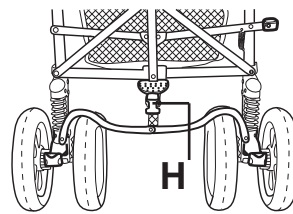


Fig. 2.3

**TO FIT THE CANOPY**

Put the two parts I (Fig. 3) on both sides of the canopy on the guideways J of the canopy support until you feel them engage. Fasten velcros K round the frame tube (Fig.3). Press the canopy hinge down on both sides.

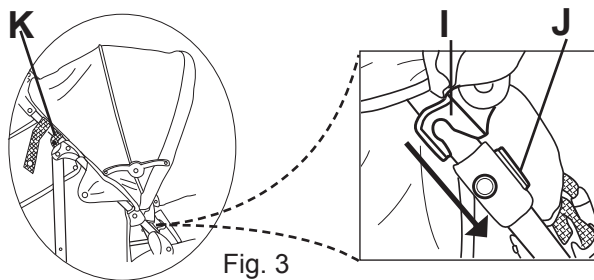


Fig. 3

**TO FIX AND TO RELEASE THE BRAKES**

TO FIX: Press the brake levers C downwards with your foot. Make sure the brake has engaged. (Fig. 4)  
TO RELEASE: Push the brake levers C upwards. (Fig. 4).

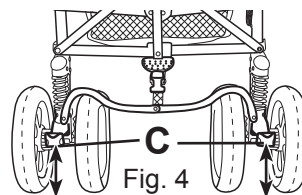


Fig. 4

**WARNING:** Before putting your child in the stroller engage the brakes to make sure it doesn't roll away. Never leave the MARCO Sky Longhorn without engaging the brakes.

**TO ADJUST THE HANDGRIPS**

The MARCO Sky Longhorn is equipped with universally adjustable handgrips.  
To adjust, release the quick release lever L on the handles (Fig. 5.1, 5.2) The handles can now be extended as well as turned to the required position.  
After adjusting the handles fasten quick release lever L. To ensure that the handle is fixed tightly, turn quick release lever L for better adjustment.

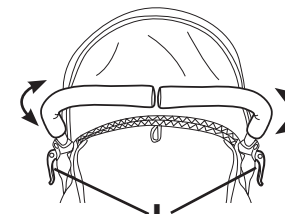


Fig. 5.1

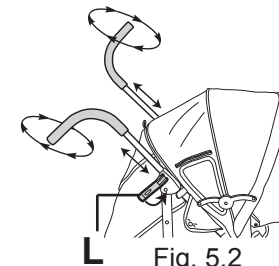


Fig. 5.2

**TO FIX AND TO SWIVEL THE FRONT WHEELS**

TO FIX: Turn the front double wheels so that the fixing lever M faces the front. To fix the wheels, press the fixing lever M downwards until it engages. (Fig. 6)

TO SWIVEL: Push the fixing lever M upwards. (Fig.6)

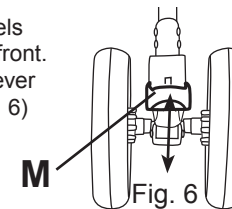


Fig. 6

**TO OPEN AND TO FASTEN THE SAFETY BELT**

Both seats of the MARCO Sky Longhorn are fitted with a 5-point harness system.  
TO FASTEN: see Fig. 7.1  
TO OPEN: see Fig. 7.2  
For extra safety D rings are provided for the attachment of a separate safety harness approved to BS 6684.

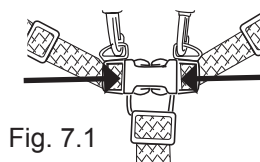


Fig. 7.1

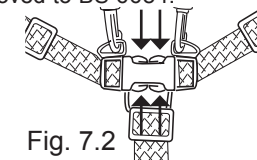


Fig. 7.2

**WARNING:** Always ensure that your child is safely belted in.

**TO ADJUST THE BACKREST**

The rear backrest can be adjusted to three positions: Upright, middle and flat. Pull lever M on the backrest of the rear seat (Fig. 8.1) and adjust the backrest to the required position. (Fig. 8.2)

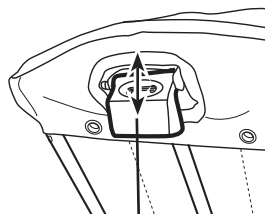


Fig. 8.1 **M**

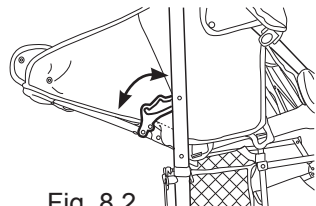


Fig. 8.2

**ACCESSORY:**

This push chair is equipped with a car seat adapter matching the car seat MARCO Maxxi (Group 0+) Attention: Car seats of other brands do not fit on the adapter!

**TO ATTACH THE CAR SEAT MARCO MAXXI (ACCESSORY)**

Open the cover for the arm rest on the front seat and fold car seat adapter N upwards on both sides (Fig. 9.1.)

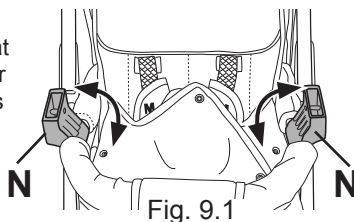


Fig. 9.1

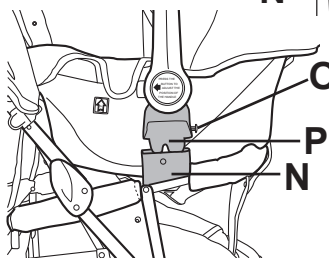


Fig. 9.2

Press buttons O and push the locking devices P into the adapters N of the stroller until they engage. (Fig. 9.2)

Before putting your child into the MARCO Maxxi car seat, make sure that the car seat is completely attached to the push chair and that all locks are engaged.

**! MAINTENANCE !**

The textiles are removable and handwashable at 30° C. The frame and the wheels should be wiped with a damp cloth and mild soap. Don't use strong detergents, they could damage plastic. Regularly lubricate the moving parts with silicon oil or silicon spray.

**! NOTE !**


This vehicle must not be used for more than 2 children at the same time. This vehicle is intended for 2 children up to a maximum weight of 15kg (per child). The net basket should not be loaded with more than 3 kg. Spare parts or accessories which are not approved by the manufacturer or dealer may not be used. All parts of the vehicle should be inspected regularly to ensure that they function properly. Please do not make any changes to the stroller that could affect the safety.

**! WARNINGS !**

- WARNING: The front seat is not suitable for children under 6 months.
- WARNING: It may be dangerous to leave your children unattended.
- WARNING: Ensure that all the locking devices are engaged before use.
- WARNING: Any load attached to the handle affects the stability of the pram/pushchair.
- WARNING: This Product is NOT suitable for jogging or inline skating.
- WARNING: Always use the safety harness.
- WARNING: Always use the crotch strap in combination with the waist belts.

**USER'S INSTRUCTIONS**

We congratulate you on your purchase of this stroller for 2 children. This pushchair offers optimal performance and value and is very easy to use.

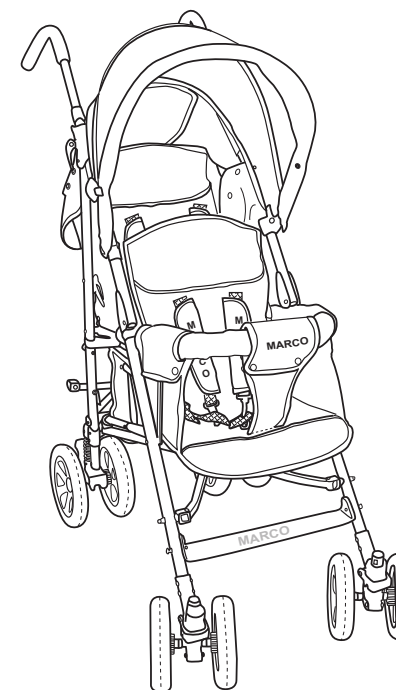

**IMPORTANT:** Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.