

We congratulate you on your purchase of this table mounted chair with extra safety lock. The MARCO Mesa A offers maximum comfort and safety. In order to ensure this, our engineers have paid attention to every detail. Therefore, please read the present instructions carefully before use.

! WARNING !

1. The table mounted chair is not suitable for children who cannot sit unaided.
2. Before putting your child into the seat, make sure that the two extra arms C (Fig. 2.1) are locked in upright position, and that the seat is screwed tight onto the table with the two clamp screws D.
3. Check that the table will not tip when the table mounted chair, attached to it, is in use.
4. The table top to which the chair is mounted must be minimum of 18 mm and maximum 55 mm thick.
5. Do not use tablecloths or other objects on the support surface which might interfere with the proper functioning of the anchoring elements. Keep the table structure and surface clean and dry.
6. The table mounted chair shall not be used by children weighing more than 15 kg.
7. Routinely check any clamping screws and retighten them, if required. Check also the suction pads.
8. Do not use replacement parts other than those approved by the manufacturer or distributor.
9. Do not attach the table mounted chair where the child might use its feet to push against a part of the table, another chair or any other structure as this could cause the table mounted chair to come off the table.
10. Do not use on glass topped tables, tables with loose table tops, table leaves, single pedestal tables, card tables or camping tables.

TO OPEN

- hold both side parts by the rubber coated arms B (Fig. 1.1, Fig. 1.2)
- Lift up the seat
- Fold the side parts A all the way outwards (Fig. 1.2)

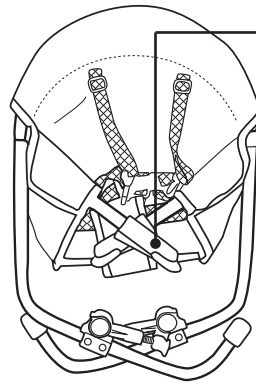


Fig. 1.1

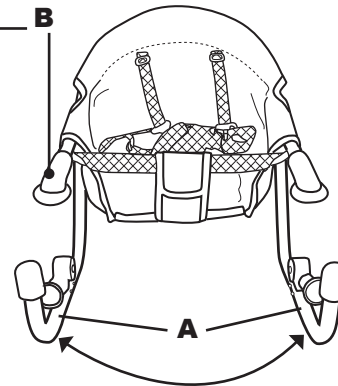


Fig. 1.2

TO FIT ONTO THE TABLE

Push the table mounted chair Mesa A onto the tabletop. (Fig. 2.1)
Put the extra arms C in a vertical position until the locks engage. (Fig. 2.2)

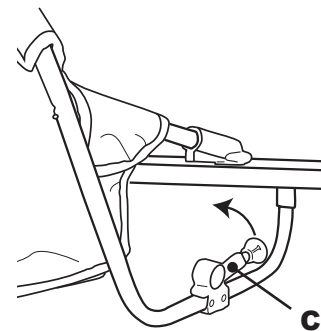


Fig. 2.1

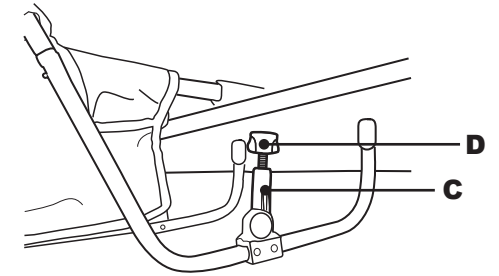


Fig. 2.2

Turn the clamp screws D of the two extra arms C until the seat is firmly clamped to the tabletop. Make sure that the index pins E of the two side parts A (on the back of the backrest) are engaged in the vertical slots. (Fig. 3.1, Fig. 3.2)
It must now be impossible to fold the side parts inwards.

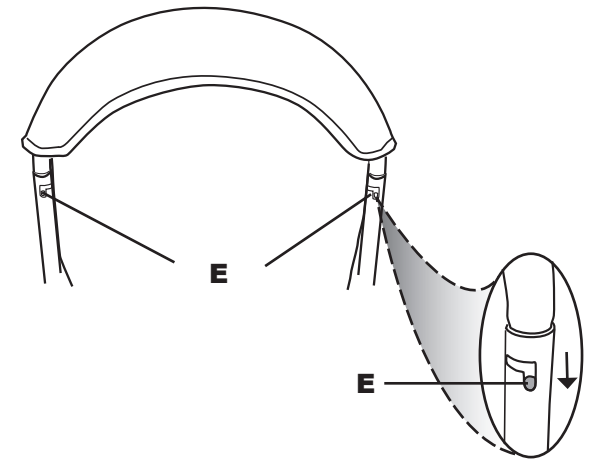


Fig. 3.1

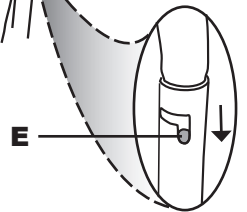


Fig. 3.2

SAFETY BELT

The table mounted chair Mesa A is equipped with a 5-point-harness.

TO FASTEN: Insert the two tongues F into the buckle G until they engage. (Fig. 4.1)

TO OPEN: Press the tongues F and pull them out of the buckle G. (Fig. 4.1)

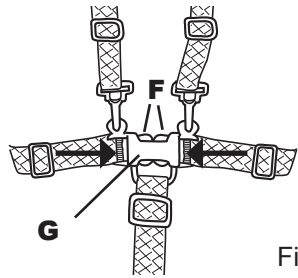


Fig. 4.1

! SAFETY !
Never forget to fasten your child's safety belt!

TO REMOVE

Press the locking buttons H on the extra arms C. Put the extra arms C down and pull the seat off the tabletop. (Fig. 5.1)

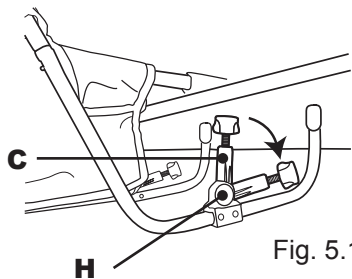


Fig. 5.1

TO FOLD

Pull the side parts A downwards to release the index pins E from the vertical slots. (Fig. 6.1)
Then fold the side parts A inwards.

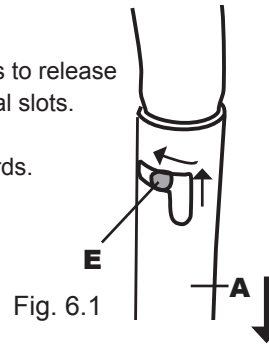


Fig. 6.1

TO REMOVE THE TEXTILE COVER

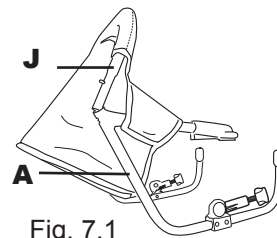


Fig. 7.1

Press the index pins E inwards and pull the side parts A off the backrest tube J. (Fig. 7.1)

Pull the side parts A out of the textile cover.

Pull the backrest tube J out of the textile cover. (Fig. 7.2)

Take the bottom board K out of the seat. (Fig. 7.3)

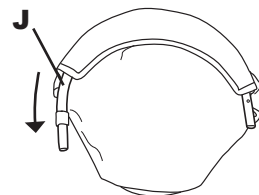


Fig. 7.2

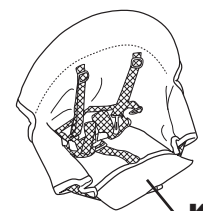


Fig. 7.3

! MAINTENANCE AND CLEANING !
The textile cover is removable and hand washable at 30°C. The frame should be wiped with a damp cloth and mild soap. Don't use strong detergents, they could damage plastic.

USER'S INSTRUCTIONS

IMPORTANT: Read the instructions carefully before use and keep them for future reference. Your child may be hurt if you do not follow the instructions.

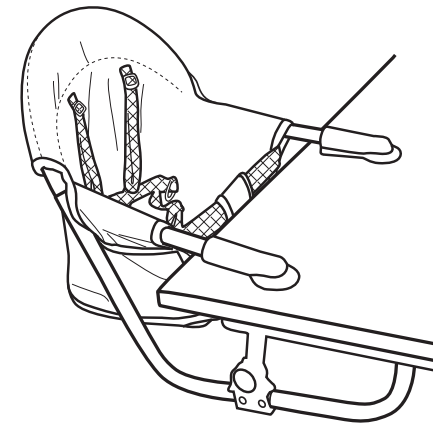


TABLE MOUNTED CHAIR
for toddlers of up to 15 kg

MARKETING AND DISTRIBUTION
MARCO HANDELSGESELLSCHAFT M.B.H.
A-5440 GOLLING, AUSTRIA
www.marco4bb.com

© MARCO HANDELSGESELLSCHAFT M.B.H., 2005
A-5440-Golling, Austria