

TO OPEN

Open the hook A1 (Fig. 1) on the side of the stroller, and pull the pushchair upwards by the handlebar, until it clicks into place. (Fig. 1.1, Fig. 1.2)

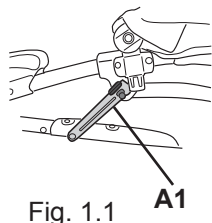


Fig. 1.1 A1

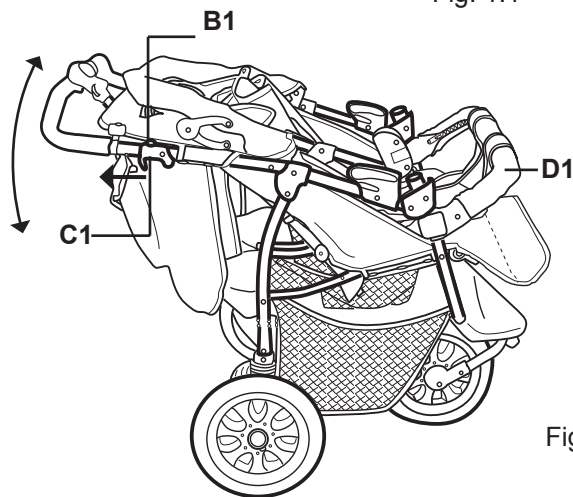


Fig. 1.2

TO FOLD

Remove the bumper D1. (Fig.1.2, Fig. 8)
The backrest must be in the flat position. Press the button B1 and pull the levers C1 upwards on both sides. Fold the stroller and close the hook A1. (Fig. 1.1)

TO FIT THE FRONT WHEEL

Push the front wheel with its mounting C2 onto the tubes A2 until the spring buttons B2 engage. (Fig. 2)

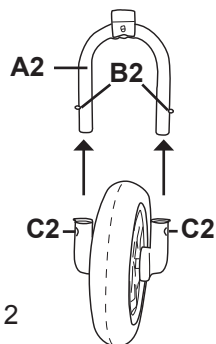


Fig. 2

TO FIT THE REAR WHEELS

TO FIT: Push the rear wheels with the axles A3 onto rear axle mountings B3 until they engage. (Fig. 3.1)

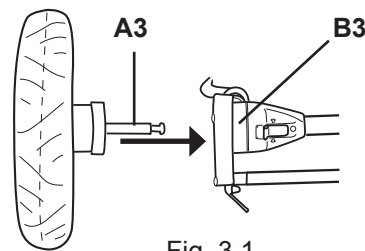


Fig. 3.1

TO REMOVE: Press the lever C3 and pull the wheel from the axle mounting B3. (Fig. 3.2)

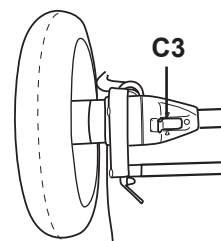


Fig. 3.2

TO FIX AND TO SWIVEL THE FRONT WHEEL

To fix or to swivel the front wheel, push the lever A4 to the right or to the left, respectively. (Fig. 4.1, Fig 4.2)

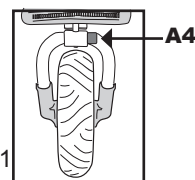


Fig. 4.1

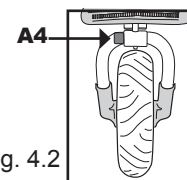


Fig. 4.2

BRAKES

The MARCO Twin Go is fitted with a handbrake and a „one-touch“ locking brake.

LOCKING BRAKE: To block the wheels push down the brake lever A5.

To release the brake push the brake lever A5 upwards. (Fig. 5.1)

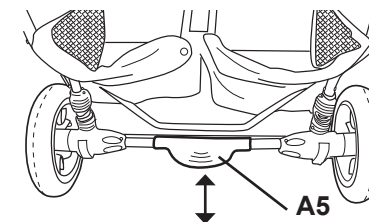


Fig. 5.1

HANDBRAKE: The handbrake B5 is mainly a retarding brake, which acts on the rear wheels. It should, for example, prevent the stroller from becoming too fast on a hill.

To re-tighten the brake cable, the screw E5 must be loosened. After the brake cable is tightened, the tension of the cable can be regulated by turning the ridged screws C5 and D5. (Fig. 5.2, Fig. 5.3)

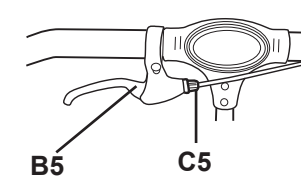


Fig. 5.2

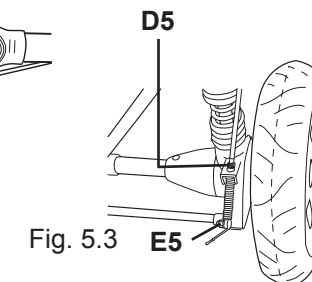


Fig. 5.3

SAFETY HARNESS

The MARCO Twin Go has a 5-point safety harness system..

TO CLOSE: See Fig. 6.1

TO OPEN: See Fig. 6.2

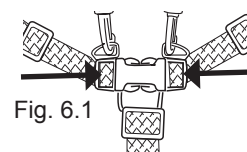


Fig. 6.1

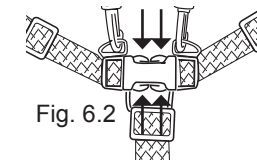


Fig. 6.2

TO ADJUST THE BACKREST

The backrests can be adjusted to four positions, independently of each other.

Pull up the backrest release A7 and adjust the backrest into the required position. (Fig. 7)

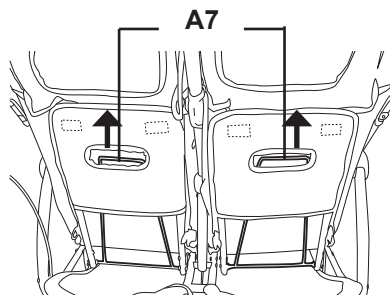


Fig. 7

TO REMOVE AND REFIT THE SAFETY BAR

TO REMOVE: Open the fitting levers A8 on both sides, and remove the bumper. (Fig. 8)

TO FIT: Put the bumper onto the frame and close the fitting levers A8 on both sides. (Fig. 8)

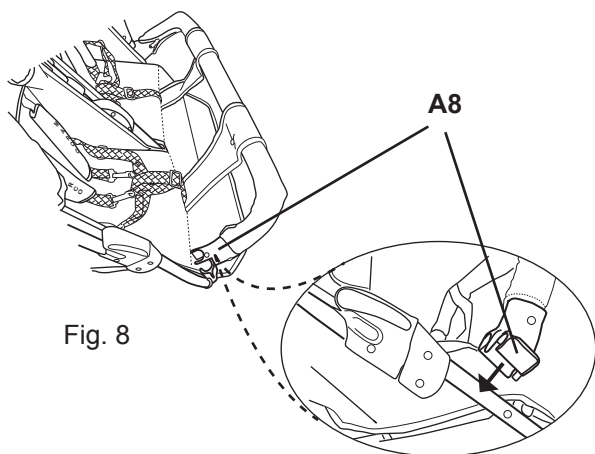


Fig. 8

TO FIT THE CANOPY

Insert the canopy holders on both sides into the corresponding openings B9. (Fig. 9)

To remove, press the buttons A9 and pull the canopy holders out of the openings B9.

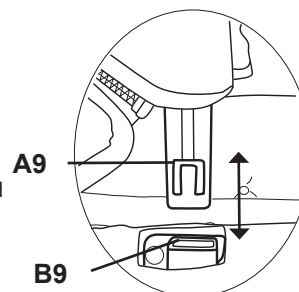


Fig. 9

MAINTENANCE

The textiles are easily removable and handwashable at 30° C. The frame should be wiped with a damp cloth and mild soap. Don't use strong detergents, they could damage plastic. The tyres can be pumped up with a bicycle pump. Faulty tubes can be repaired with a bicycle puncture repair kit. Regularly lubricate the moving parts with silicon oil or silicon spray.

NOTE


This vehicle must not be used for more than 2 children at the same time. This vehicle is intended for 2 children up to a maximum weight of 15kg (per child). The net basket should not be loaded with more than 3 kg. Spare parts or accessories which are not approved by the manufacturer or dealer may not be used. All parts of the vehicle should be inspected regularly to ensure that they function properly. Please do not make any changes to the stroller that could affect the safety.

WARNINGS

- WARNING: It may be dangerous to leave your children unattended.
- WARNING: Ensure that all the locking devices are engaged before use.
- WARNING: Any load attached to the handle affects the stability of the pram/pushchair.
- WARNING: Always use the crotch strap in combination with the waist belts.

USER'S INSTRUCTIONS

We congratulate you on your purchase of your twin-jogger. The MARCO TWIN GO offers optimal performance + value and is very easy to use.

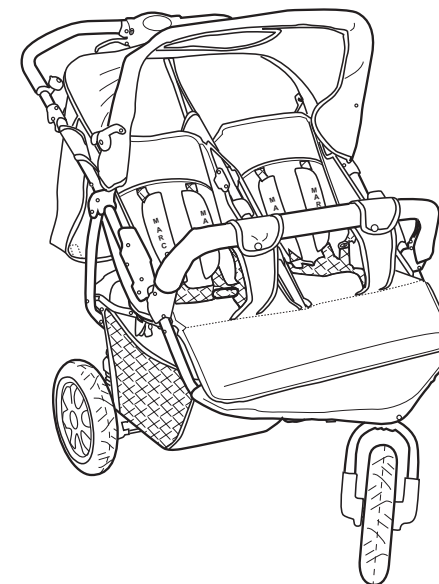

IMPORTANT: Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

MARKETING AND DISTRIBUTION
MARCO HANDELSGESELLSCHAFT M.B.H.
A-5440 GOLLING, AUSTRIA
www.marco4bb.com

© MARCO HANDELSGESELLSCHAFT M.B.H., 2005
A-5440-Golling, Austria